


Assembly instructions for VAD socket E30-E90

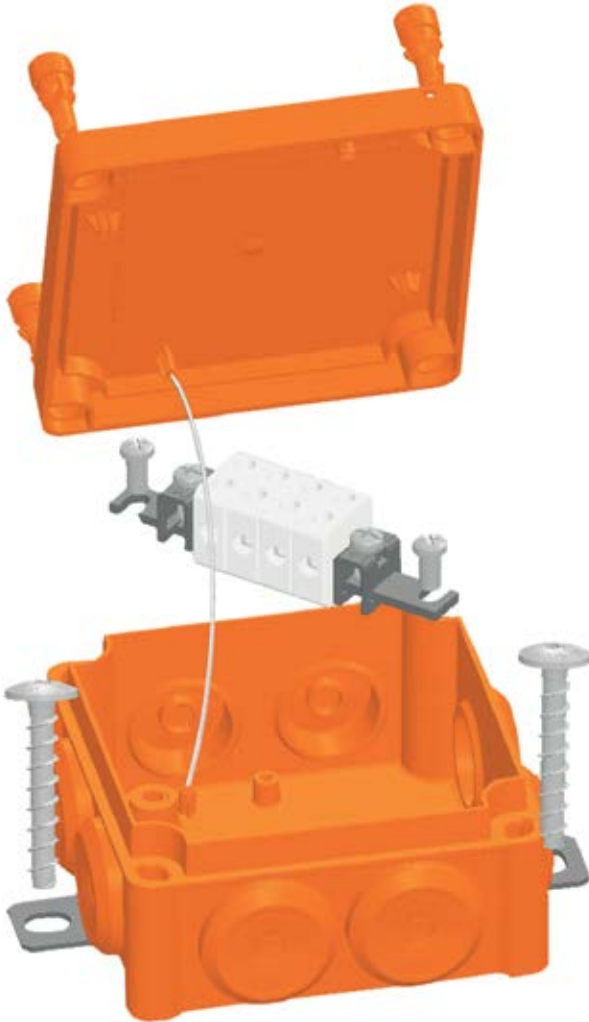

Drill the holes:
Drill bit diameter is 6 mm
Embedment depth is > 45 mm
Blow out the drilled holes
with compressed air to clean them.

Fix the Box:
With the standard mounting screws
and T-Drive „30“.
The VAD 3 box is mounted on the
approved mounting surface.
Unscrew the lid and secure it against
falling with the lid loop.
The cable entries are made by piercing
the existing dowels.
Make cable connections according to
test certificate.
Close cover and provide cable system
with identification plate.

The mounting screws are certified
for concrete, full bricks, masonry,
perforated sand lime bricks and
solid sand lime bricks.

MMS+ MS 7,5/45
Mounting screws assembly instructions:
Page 97

Basic information on plugs:
Page 92

General Appraisal Certificate
P-MPA-06-030

