


LF8 PLUG / HMS INSTALLATION BOLT

Assembly instructions

Assembly instructions for LF8 plug



Drilling

Seating depth: 42 mm

Drill bit: SDS2

Purge the drilled hole.


Insert the plug into the drilled hole.

Driving in

Place the setting tool "SMu 6-SM" onto the "SDS2" drill bit.

Drive the plug into the drilled hole using the drill hammer

Assembly instructions for HMS installation bolt and single clips of type SAS to D

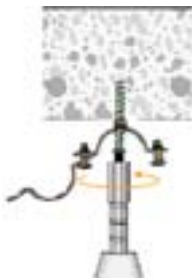

Drilling

Seating depth: > 30 mm

Drill bit \varnothing : 4 mm

Purge the drilled hole.

Insert HMS bolt through SAS clip up to the drilled hole.

Bolt into place
using T-drive "20"

MMS INSTALLATION BOLT / PBD PLUG

Assembly instructions

Assembly instructions for MMS installation bolt and Hermann clip / profile rail



Drilling

Seating depth: > 40 mm

Drill bit \varnothing : 6 mm

Purge the drilled hole.


Insert MMS bolt through Hermann clip / profile rail up to the drilled hole.



Bolt into place

using T-drive "40"

Assembly instructions for PBD gas concrete plugs

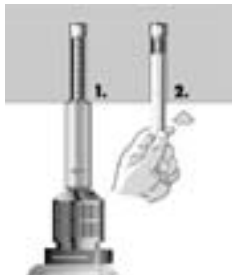

1. Use the setting tool and hammering action of the drill hammer to drive the tapered bolts into the gas concrete.
Do not pre-drill.
2. Insert the splaying sleeve.



3. Use the setting tool and hammer action of the drill hammer to drive the splaying sleeve into place.
4. Tighten the component into place until the blue marking becomes visible.